



Garmin Dezl 760LMT Screen Replacement

Replace your Garmin's broken, malfunctioning, blurry, or cracked screen to restore proper functioning to the GPS.

Written By: Ryan Williams



INTRODUCTION

This guide will show you how to properly and safely remove the Garmin Dezl 760LMT's screen from the motherboard and its casing.



TOOLS:

- [Anti-Static Wrist Strap](#) (1)
 - [T6 Torx Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
 - [T5 Torx Screwdriver](#) (1)
-

Step 1 — Back Panel



- Using a Torx T6 Screwdriver, remove the ten 7mm screws from the back panel.

Step 2




- Using a metal spudger, pry the device apart.

☒ To recombine them, line up the two halves of the device and press them together.


Step 3



- Turn the device over, laying it on its back with the screen facing upwards.
- Lift the front panel away from the silver part of the back panel.


 Make sure not to rip the ribbon cable that is connected to the screen and the motherboard.

Step 4 — Screen Ribbon Cable

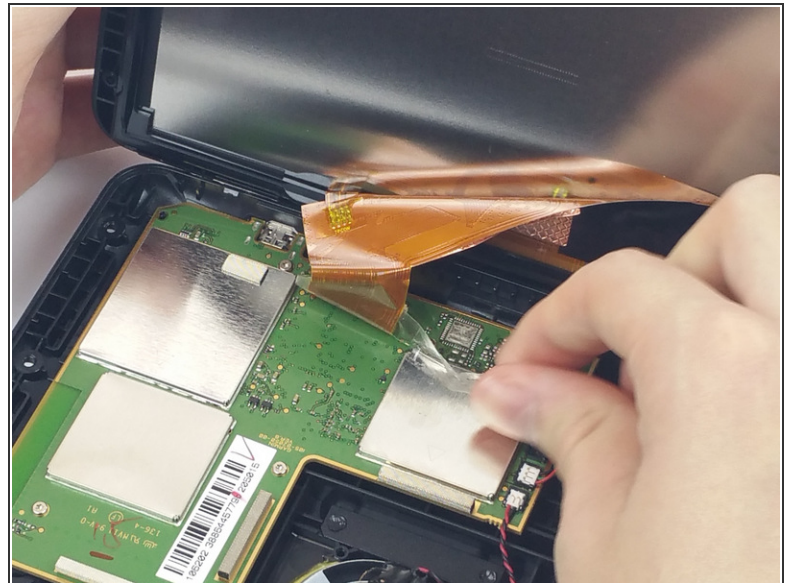

- Lift the screen opposite where the "GARMIN" logo is located. Remove the clear tape holding the ribbon cable to the motherboard.

Step 5

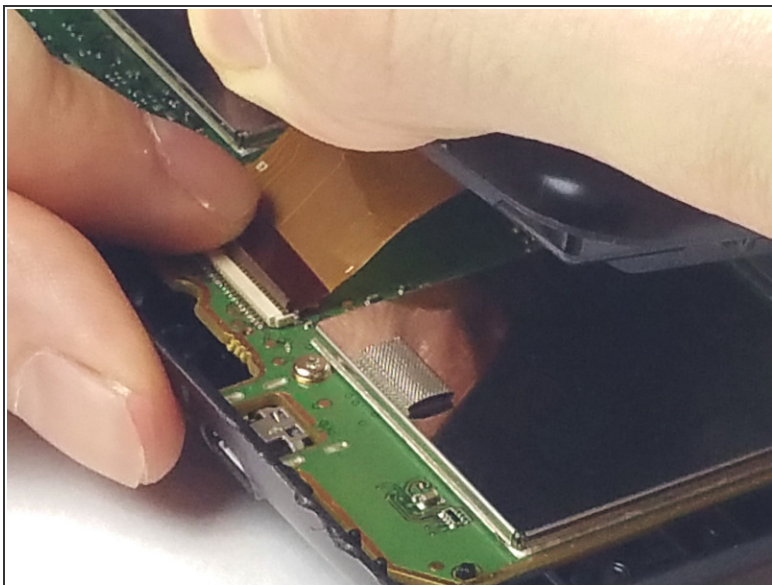

- Find and lift the small grey hinge at the end of the ribbon cable.


⚠ When handling the motherboard, make sure to wear an anti-static wrist strap.

Step 6 — Screen



- Using a Torx T5 screwdriver, unscrew the four 7mm screws from the back plate of the screen.

Step 7

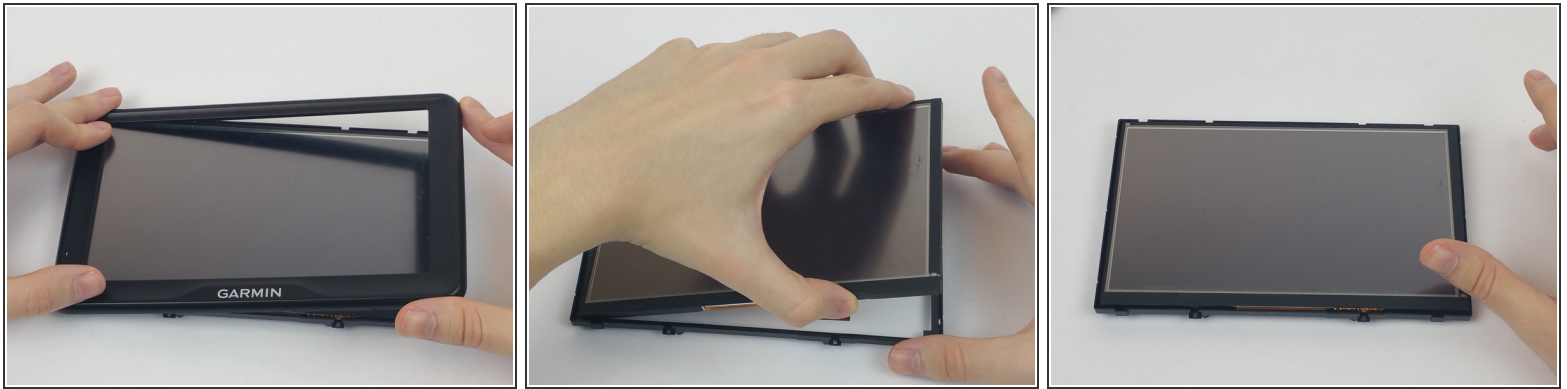

- Turn the screen over so that it is facing upwards.
- Remove the front plate of the screen.
- Lift the screen from its back casing.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-14 07:54:47 PM.